


Models CT-9KW & CT-18KW

For 230 Volt:

- 1) T1 to 1A & 2B
- 2) T2 to 2A & 3B
- 3) T3 to 1B & 3A

For 460 Volt:

- 1) T1 to 1A
- 2) T2 to 2A
- 3) T3 to 3A
- 4) Tie 1B, 2B, 3B together.

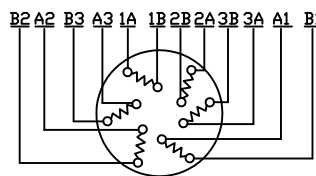

Models CT-28KW & CT-56KW

For 230 Volt:

- 1) T1 to A3-1B-2A-3B
- 2) T2 to 1A-B3-A2-A1
- 3) T3 to 2B-3A-B1-B2

For 460 Volt:

- 1) T1 to 2A-3B
- 2) T2 to 1A-B3
- 3) T3 to B2-B1
- 4) Tie together:
1B-2B
A3-A2
A1-3A

NO.	DESCRIPTION	DATE

Carbo Tech, Inc.
 EQUIPMENT
 P.O. Box 1938 - Morrow, Georgia 30065
 9, 18, 28, 45, 56 KW
 Pressure Build Vaporizer
 Control Wiring Diagram
 DRN BY: J.W.W.
 CAD BY: DATE: 10.20.03
 SCALE: NONE
 VAP-871-24